


Introduction

Visit Technology.freemansd.org for more tutorials and information. In order to print to use the FHS Blue Gym Sound System you must follow the steps below


To Use the Microphone or Auxiliary Sound (Phones, Tablets, etc.)

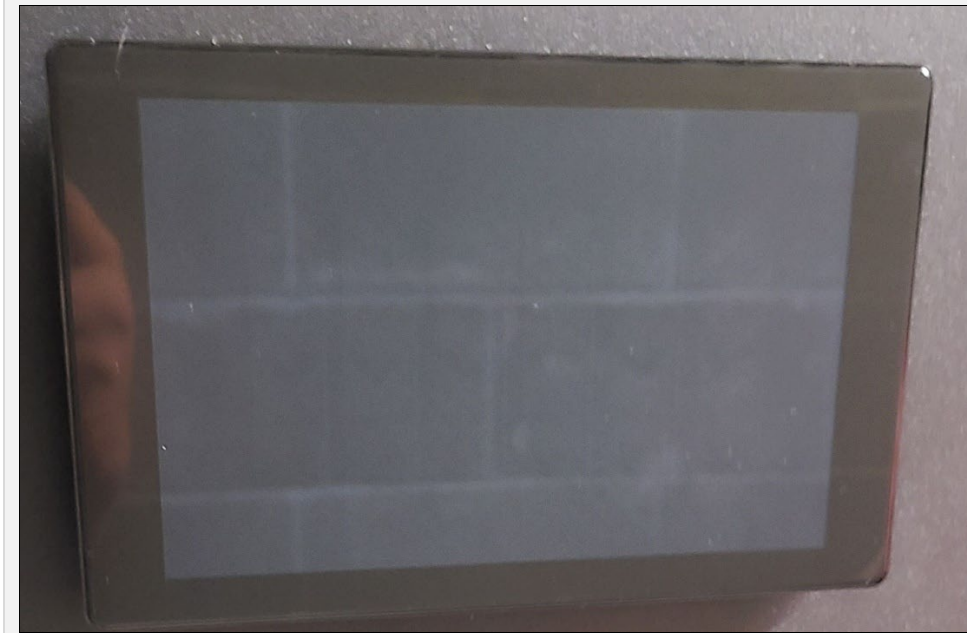

STEP 1

Press anywhere on the touch screen to power system on

* - Wait 15 seconds for everything to power on (Green Lights).

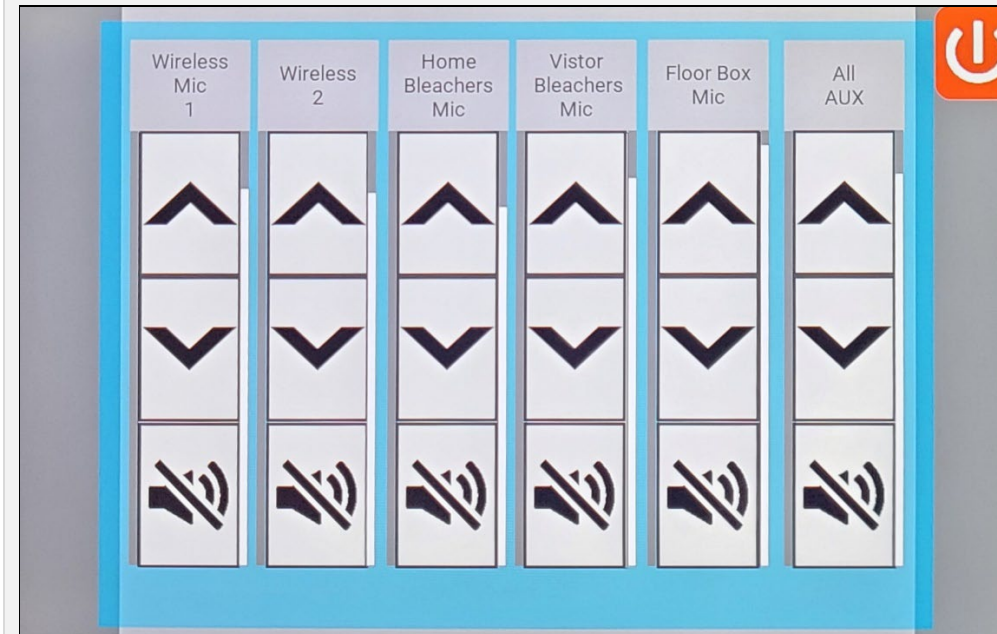

STEP 2

Turn on microphone or plug into the Aux In – 3.5mm front port

Volume is controlled by Wireless Mic 1 & Wireless 2 or 'All Aux'

UP Arrow = Volume Up, DOWN Arrow = Volume Down



Confirm Shutdown?

No, Leave the
System On

Yes, Shut Down
the System

STEP 3

Press the red power button to power down the system.

You will be prompted with Confirm Shutdown?

Yes, Shut Down the System (Green)

No, Leave the System On (Red)