



Introduction

The classroom VoiceLift Microphone employs wireless technology for classroom voice amplification.

FMS/FHS Voicelift Microphone



1. Turn the microphone on by holding the power button for three seconds
2. Speak in a normal tone of voice. Do not block the microphone port or grill opening
3. Adjust the volume if necessary.
4. Insert charging cord when not in use.

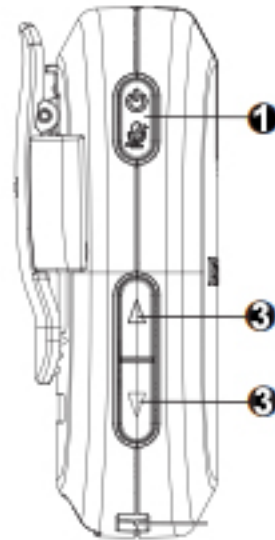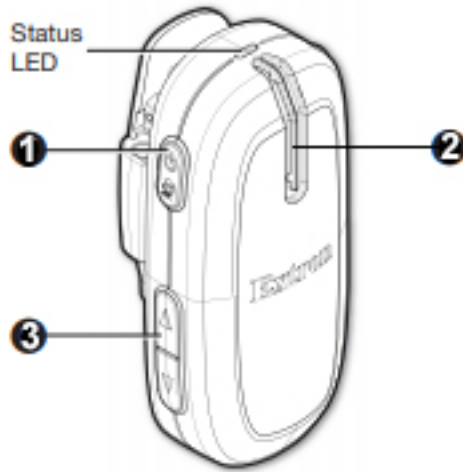

4. Insert the microphone into one of the charger slots (4). The microphone LED turns red when the microphone is charging.

LED Color	Indication
Red – steady	Battery charging
Green – steady	Battery fully charged
Red and green – alternate blinking	Incompatible or failed battery detected. Check and replace battery.

